


NOTE: Boiler height increases by 1-3/4" when CENTER BOILER SIDE TO SIDE ON BASE PLATE AS SHOWN ABOVE combustable floor kit is used.

BOILER MODEL	DIMENSION "A"
S-34, V-33, VHS-30	2-1/2"
S-60, SE-70, V-60, VHS-60	1"
S-90, SE-105, V-90, VHS-90	0
S-120, SE-140, V-120, VHS-120	2-1/2"
S-150, SX-150, SE-175, V-150, VHS-150	1"
SX-180, SE-210, V-180, VHS-180	0
SX-210, SE-245	0

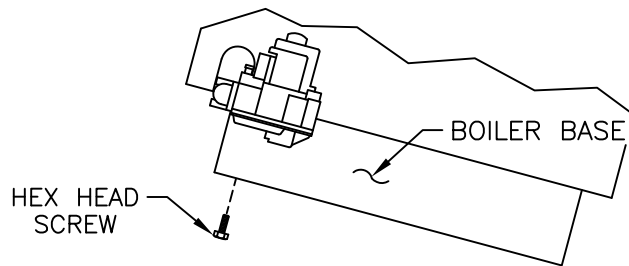

- The four Hex head screws provided must be installed in the boiler base for this to be a certified installation. The screw heads raise the boiler to provide the required ventilation. Tip boiler backward and insert two screws in holes provided as shown to the left. Then tip boiler forward and insert two screws in holes provided, a hex head screw driver should be used. The holes are oversized for ease of installation. If holes are too large to thread screw into base use 1/4-20 nuts provided.

PACKING LIST		S-34 V-33 VHS-30	S-60 SE-70 V-60 VHS-60	S-90 SE-105 V-90 VHS-90	SE-120 SE-140 V-120 VHS-120	S-150 SX-150 SE-175 V-150 VHS-150	SX-180 SE-210 V-180 VHS-180	SX-210 SE-245
PART NUMBER	DESCRIPTION							
41-2263	BASE PLATE 12-3/8 X 22-5/16	1	1	1	-	-	-	-
41-2264	BASE PLATE 21-3/8 X 22-5/16	-	-	-	1	1	1	-
41-2265	SUPPORT CHANNEL 22" LG.	2	2	2	2	2	2	2
40-0326	DRIVE SCREW 1/4-20 X 1/2"	4	4	4	4	4	4	4
902702011	HEX NUT 1/4-20	4	4	4	4	4	4	4
46-0150	BASE PLATE 23-3/32 X 25-7/32	-	-	-	-	-	-	1

Slant/Fin SLANT/FIN CORPORATION
 100 FOREST DR., GREENVALE, N.Y. (516) 484-2600

TITLE INSTALLATION INSTRUCTIONS FOR
 SENTRY, VICTORY, VICTORY II AND
 SENTINAL COMBUSTIBLE FLOOR KITS

DATE 5-2-00	DRAWN BY AC	DRAWING NUMBER 41-2266
DATE	APPROVED	